




## Repacking the Tank Box Instructions

STEP 1 – Align the rails with the Right Rail to the right side and Left Rail to the left side. Both rubber feet are facing outwards as shown in the picture.

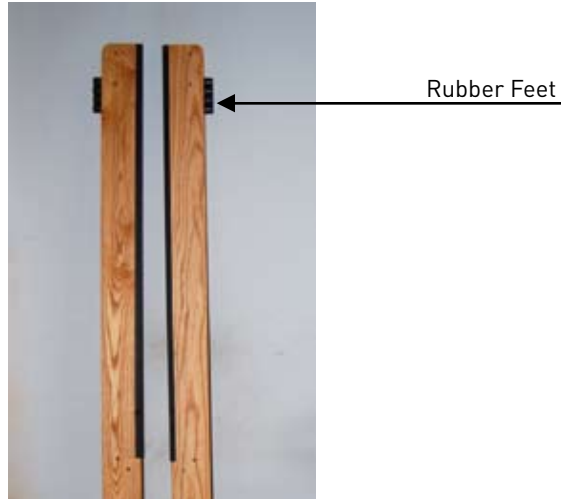

STEP 2 – Insert the Right Rail into the back slot of the one half of the rail box. Ensure the top edge of the rail box is to the right side as seen in the picture.



STEP 3 – Insert the left rail into the front slot of the half rail box. The rails are aligned opposite to each other.



STEP 4 – Angle the rails and stabilise the box end, this can be against the wall as shown in the picture.



STEP 5 – The rails will need to be opened apart slightly when inserting the other half of the rail box.



STEP 6 – Position the other half of the rail box so the top edges of the box fit together. Slide the other half of the box down so that the two halves fit together.



STEP 7 – Tape the 2 boxes together.

